

Low Pressure Filter/Suction Filter Pi 220

Nominal pressure 10 bar (140 psi), up to nominal size 160


1. Features

High performance filters for modern hydraulic systems


- Provided for pipe installation
- Modular system
- Compact design
- Minimal pressure drop through optimal flow design
- Visual/electronic/electronical maintenance indicator
- Threaded connections

- Quality filters, easy to service
- Equipped with highly efficient Mic or Sm-x filter elements
- Beta rated elements according to ISO 16889
- Elements with high differential pressure stability and dirt holding capacity
- Worldwide distribution



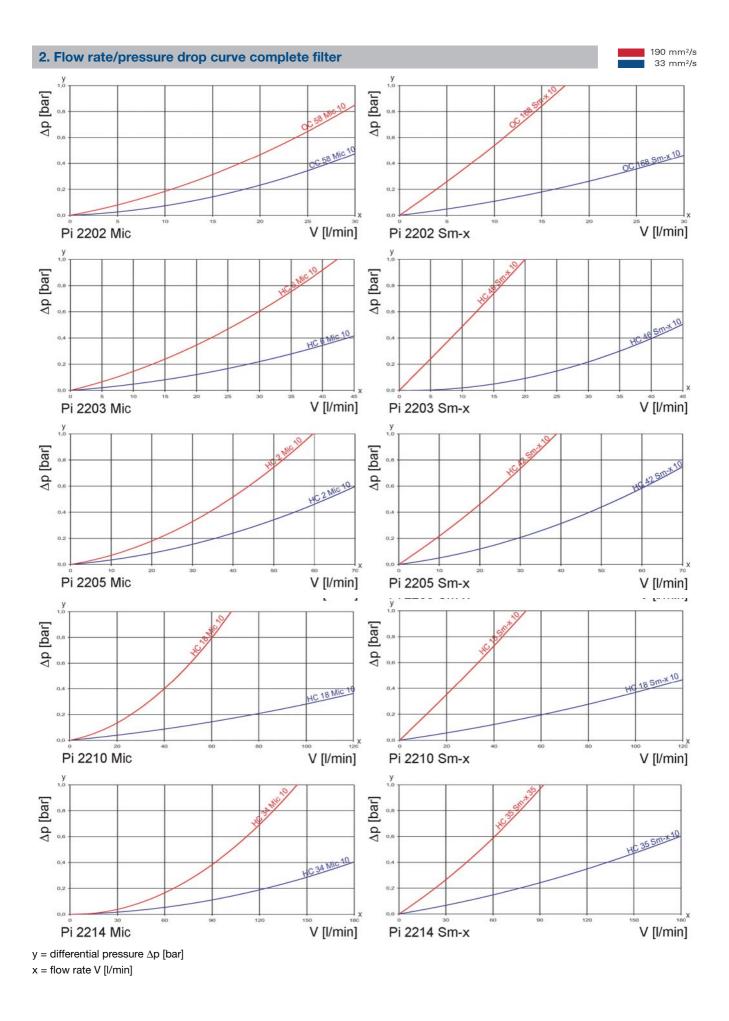

3. Separation grade characteristics

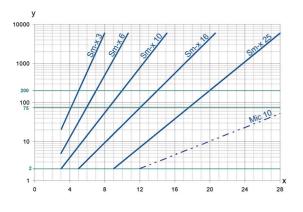

y = beta-value

x = particle size [µm]


determined by multipass tests (ISO 16889) calibration according to ISO 11171 (NIST)

5. Quality assurance

MAHLE filters and filter elements are produced according to the following international standards:

Norm	Designation
DIN ISO 2941	Hydraulic fluid power filter elements; verification of collapse/burst resistance
DIN ISO 2942	Hydraulic fluid power filter elements; verification of fabrication integrity
DIN ISO 2943	Hydraulic fluid power filter elements; verification of material compatibility
DIN ISO 3723	Hydraulic fluid power filter elements; method for end load test
DIN ISO 3724	Hydraulic fluid power filter elements; verification of flow fatigue characteristics
ISO 3968	Hydraulic fluid power-filters-evaluation of pressure drop versus flow characteristics
ISO 10771.1	Fatigue pressure testing of metal containing envelopes in hydraulic fluid applications
ISO 16889	Hydraulic fluid power filters-multipass method for evaluation filtration performance of a filter element

6. Symbols

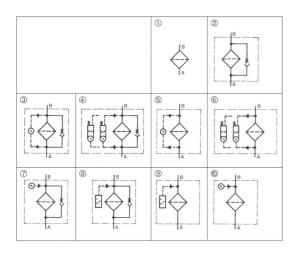

4. Filter performance data

tested according to ISO 16889 (multipass test)

Sm-x-elements with max. Δ p 5 bar

Sm-x 10 $\beta_{10(C)} \ge 200$

values guaranteed up to 5 bar differential pressure

7. Order numbers

Example for ordering filters:

1. Housing design	2. Spin-on cartridge
V=25 I/min, bypass, electrical maintenance indicator	Mic 10
Type: Pi 2202-058	Type: OC 58
Order number: 77665649	Order number: 77785983

7.1 Housing d	esign/order nı	umber for press	ure-side instal	lation				
Nominal size NG [l/min]	Order number	Туре	্য no options	③ with bypass valve	③ with bypass valve and visual indicator	④ with bypass valve and electrical indicator	ि with visual indicator	© with electrical indicator
	77665656	Pi 2202-60	-					
	77665623	Pi 2202-56						
	77665631	Pi 2202-57						
25	77665649	Pi 2202-58						
	77665664	Pi 2202-68						
	77665672	Pi 2202-69						
	77665714	Pi 2203-60						
	77665680	Pi 2203-56						
	77665698	Pi 2203-57						
40	77665706	Pi 2203-58						
	77665748	Pi 2203-68						
	77665755	Pi 2203-69						
	77665813	Pi 2205-60						
	77665789	Pi 2205-56						
	77665797	Pi 2205-57						
63	77665805	Pi 2205-58						
	77665847	Pi 2205-68						
	77665854	Pi 2205-69						
	77666001	Pi 2210-60						
	77665979	Pi 2210-56						
100	77665987	Pi 2210-57						
100	77665995	Pi 2210-58						
	77666050	Pi 2210-68						
	77666068	Pi 2210-69						
	77666126	Pi 2214-60						
	77666092	Pi 2214-56						
160	77666100	Pi 2214-57						
100	77666118	Pi 2214-58						
	77666183	Pi 2214-68						
	77666191	Pi 2214-69						

When filter with non bypass configuration is selected, the collapse pressure of the spin-on cartridge must not be exceeded.

Nominal size NG [l/min] Press./Suct. side	Order number	Туре	Filter material	max. ∆ p [bar]	Filter surface [cm²]
05/10	77785983	OC 58 Mic 10 _		_	1775
25/10	77500184	OC 168	Sm-x 10	5	1309
40/40	77501273	HC 6	Mic 10	-	3000
40/16	77501232	HC 46	Sm-x 10	5	2075
CO /OF	72013241	HC 2	Mic 10	<i>_</i>	5440
63/25	77501372	HC 42	Sm-x 10	5	3360
100/40	77643331	HC 18	Mic 10	-	7000
100/40	77643398	HC 28	Sm-x 10	5	3400
100/00	77504194	HC 34	Mic 10	<i></i>	14025
160/63	77643844	HC 35	Sm-x 10	5	7638

7.3 Housing	design/orde	r numbers for	suction-side	installation				
Nominal size NG [l/min]	Order number	Туре	① no op- tions	② with bypass 0.25 bar	 ⊘ with bypass 0.25 bar and vacuum gauge 	® with bypass 0.25 bar and vacuum switch	with vacuum switch	withvacuumgauge
	77665656	Pi 2202-060						
	77736614	Pi 2202-067						
	77736622	Pi 2202-062						
10	77736630	Pi 2202-061						
	77736606	Pi 2202-065						
	77736598	Pi 2202-066						
	77665714	Pi 2203-060						
	77665730	Pi 2203-067						
40	77736689	Pi 2203-062						
16	77736697	Pi 2203-061						
	77736671	Pi 2203-065						
	77665722	Pi 2203-066						
	77665813	Pi 2205-060						
	77736747	Pi 2205-067						
05	77665821	Pi 2205-062						
25	77736754	Pi 2205-061						
	77665839	Pi 2205-065						
	77736739	Pi 2205-066						
	77666001	Pi 2210-060						
	77735947	Pi 2210-067						
40	77666027	Pi 2210-062						
40	77666019	Pi 2210-061						
	77666035	Pi 2210-065						
	77666043	Pi 2210-066						
	77666126	Pi 2214-060						
	77666175	Pi 2214-067						
63	77666142	Pi 2214-062						
05	77666134	Pi 2214-061						
	77666159	Pi 2214-065						
	77666167	Pi 2214-066						

When filter with non bypass configuration is selected, the collapse pressure of the spin-on cartridge must not be exceeded.

8. Technical specifications

Design:	line mounting filter
Nominal pressure:	10 bar (140 psi)*
Test pressure:	13 bar (180 psi)
Temperature range:	-10 °C to +120 °C
	(other temperature ranges on request)
Bypass setting:	

Δ p 3.5 bar \pm 10%
Δ p 0.25 bar \pm 10%
GDAL
St
NBR/AL
Δ p 2.2 bar \pm 0.3 bar
-1 bar to +1.5 bar
200 mbar
IP 54
250 V AC/200 V DC
1 A
70 W
IP 65 in inserted and
secured status
normally open/closed


Cable sleave:

The switching function can be changed by turning the electric upper part by 180° (normally closed contact or normally open contact). The state on delivery is a normally closed contact. By inductivity in the direct current circuit the use of suitable protection circuit should be considered. Further maintenance indicator details and designs are available in the maintenance indicator data sheet.

We draw attention to the fact that all values indicated are average values which do not always occur in specific cases of appliacation. Our products are continually being further developed. Values, dimensions and weights can change as a result of this. Our specialized departement will be pleased to offer you advice.

We recommend you to contact us concerning applications of our filters in areas governed by the EU Directive 94/9 EC (ATEX 95). The standard version can be used for liquids based on mineral oil (corresponding to the fluids in Group 2 of Directive 97/23 EC Article 9). If you consider to use other fluids please contact us for additional support.

* For the contamination of the housing designs as per 7.1 with medium-pressure spin-on cartriges refer to leaflet "spin-on cartridges" for dimensions and specifications. Operating pressure on request.

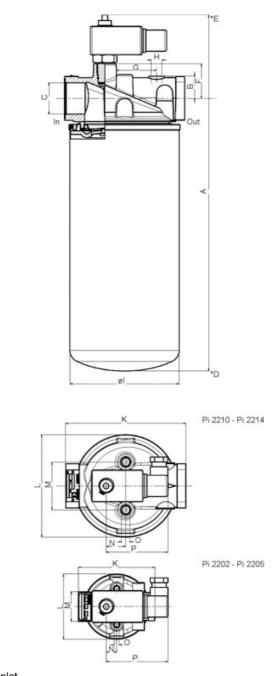

In = Inlet

Out= Outlet

*D = Height required for spin-on cartridge removal
 *E = Height required for maintenance indicator removal
 Subject to technical alteration without prior notice.

																Weight
Туре	Α	В	С	D	E	F	G*	H*	I	K	L	м	N	0	P	[kg]
Pi 2202	241	19	G1⁄2	30	45	37.5	23.5	G1/8	76	95	80	45	13.0	M8x10	78	0.90
Pi 2203	261	19	G1⁄2	30	45	37.5	23.5	G1/8	93	95	80	45	13.0	M8x10	78	1.00
Pi 2205	328	19	G¾	30	45	37.5	23.5	G1/8	93	95	80	45	13.0	M8x10	78	1.25
Pi 2210	302	30	G1¼	40	45	43.5	40.0	G1/8	136	150	128	60	24.5	M12x15	78	2.30
Pi 2214	442	30	G1¼	40	45	43.5	40.0	G1/8	136	150	128	60	24.5	M12x15	78	2.70

M20x1.5

All dimensions except "C" and "H" in mm.

9. Dimensions

*with suction-side installation only.

10.1 Filter installation

When installing the filter make sure that sufficient space is available to remove spin-on cardrige. Filter should be installed with the spinon cartridge pointing downwards.

The maintenance indicator must be visible.

10.2 Connecting the electrical maintenance indicator

The electrical indicator is connected via a 2-pole appliance plug according to DIN EN 175301-803 with poles marked 1 and 2. The electrical section can be inverted to change from normally open position to normally closed position or vice versa.

10.3 When should the filter element be replaced?

1. Filters equipped with visual and electrical maintenance indicator:

During cold starts, the indicator may give a warning signal. Press the red button of the visual indicator once again only after operating temperature has been reached. If the red button immediately pops up again and/or the electrical signal has not switched off after reaching operating temperature, the filter element must be replaced after the end of the shift.

2. Filters without maintenance indicator:

The filter element should be replaced after the trial run or flushing of the system. Afterwards follow instructions of the manufacturer.


 Please always ensure that you have original MAHLE spare elements in stock: disposable elements (Sm-x) cannot be cleaned.

10.4 Spin-on cartrige exchange

- 1. Stop system and relieve filter from pressure.
- 2. Unscrew the spin-on cartridge with the aid of a belt spanner by turning same to the left
- 3. Make sure that the order number on the spin-on cartridge corresponds to the order number of the plate.
- 4. The seal of the screw-on cartridge should be lightly oiled.
- 5. Screw cartridge on in accordance with the printed-on instructions.

11. Spare parts list

Order numbers for spare parts						
Position	Туре	Order number				
	Maintenance indicator					
0	Visual PiS 3098	77669971				
1	Electrical PiS 3097	77669948				
	Electrical upper part only	77536550				
0	Seal kit for maintenance indicator					
2	NBR	77760309				
3	Vacuum gauge	76345763				
4	Vacuum switch PiS 3070	77669724				

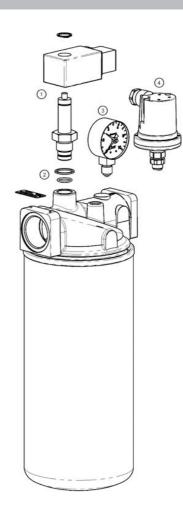



MAHLE Industriefiltration GmbH Schleifbachweg 45 74613 Öhringen Phone +49 7941 67-0 Fax +49 7941 67-23429 industriafiltration@mahle.com www.mahle-industrialfiltration.com 78356610.03/2012